



## Adjustable Rope Float Kit Instructions

To adjust rope length:

1. Attach one of the hooks to one end of the pool and stretch the safety line across the pool.
2. If the line is too long, remove the one hook from the rope and attach the hook to the wall anchor.
3. Thread the rope through the eye of the hook.
4. Cut the rope allowing an extra 8"- 12" from the eye of the hook for the loop.
5. Insert the cut end of the rope into the open end of the supplied fid (pointed plastic tube).
6. Push the pointed end of the fid into the weave of the rope approximately 2" from the hook and pull the fid through the weave, leaving the end of the rope in the weave of the main part of the rope.
7. If adjustment is necessary to lengthen or shorten the rope assembly, push the rope together to allow the loop to be pushed or pulled to the desired length.
8. Floats may be relocated on the rope by removing the float locks located inside of the rope and alongside the float and reinserting them to the desired location.

For questions contact us at: E-Mail: [Info@JEDPoolTools.com](mailto:Info@JEDPoolTools.com)